



Overview

The Cypress HHR-BOOT is a protective silicone rubber boot for the HHR readers, which helps protect the reader from drops, falls, and other physical damage. The HHR-BOOT includes an adjustable 4-ft. / 1.22-m. (approx.) breakaway shoulder strap. The shoulder strap is removable and has an adjustable shoulder pad.

Specifications		
Part Number	HHR-BOOT	UPC: 816684002847
Material	Silicone Rubber	
Dimensions	Length: 8.00 in. / 203.20 mm Width: 4.13 in. / 104.90 mm Height: 1.85 in. / 47.00 mm	
Shoulder Strap	Length	Maximum: 57 in. / 1.45 m (approx.) Minimum (without pad): 31.5 in. / 80 cm (approx.)
	Breakaway Force	20 lbs. / 9 kg
Weight	BOOT with Strap	0.74 lbs. / 0.34 kg
	BOOT only	0.55 lbs. / 0.25 kg
	Strap only	0.19 lbs. / 90 g
Compatibility	Compatible with HHR-9000B and HHR-8000B readers, and readers in HHR-3000B and HHR-4000B kits	



HHR-Boot_DS_201215

Using the HHR-BOOT

The HHR-BOOT is included with each HHR reader in the HHR-3000B and HHR-4000B kits. The HHR-BOOT provides protection for compatible HHR readers and allows the user to easily carry the reader using the shoulder strap.

The shoulder strap is connected to the HHR-BOOT with two clips connected to the D-rings on the bottom of the boot. The shoulder strap can be removed.

Removing the HHR-BOOT for charging

To charge the HHR reader, remove the HHR-BOOT before placing the reader in the charging dock. To remove the HHR-BOOT from the HHR reader push the top corners of the boot up and over the top corners of the reader, then pull the exposed reader out of the boot.

To put the HHR reader back in the boot place the bottom of the HHR reader in the bottom of the HHR-BOOT. Then pull the top of the boot up and over the top of the reader until it is secure.

The HHR reader must be removed from the HHR-BOOT in order to be placed in the charging dock.



HHR-BOOT Compatibility



Compatible with HHR-BOOT
HHR-9000B / HHR-8000B Readers
HHR-3000B / HHR-4000B Kits



Not Compatible with HHR-BOOT
HHR-9000 / HHR-8000 Readers
HHR-3000 / HHR-4000 Kits



Retrofit HHR Reader

Compatible Kits/Readers: The HHR-3000B / HHR-4000B kits include the HHR-BOOT and the HHR-9000B / HHR-8000B readers (shown on the left). These readers do not have a lanyard stud and are compatible with the HHR-BOOT.

Incompatible Kits/Readers: The HHR-9000 and HHR-8000 readers (shown in the center) have a stud on the right side for connecting the lanyard to the HHR reader. This lanyard stud interferes with the HHR-BOOT fitting over the HHR reader; HHR readers with the lanyard stud are not compatible with the HHR-BOOT. These readers are included in the HHR-3000 and HHR-4000 kits.

Retrofit Option: Available for HHR-9000 and HHR-8000 readers (shown on the right) to make the readers compatible with the HHR-BOOT. The lanyard stud is replaced with a machine screw with a low profile head to allow the HHR-BOOT to be installed. These readers are included in the HHR-3000 and HHR-4000 kits. Contact Cypress for more information.